

CAIRE®

LIBERATOR



PATIENT
OPERATING
INSTRUCTIONS

LOW LOSS

Patient's Records

Patient's Name

Prescribed Oxygen Flow Setting

Doctor's Telephone Number

Distributor's Name

Person to Contact

Distributor's Emergency Telephone Number

Special Instructions

Liberator/Low Loss

Table Of Contents

Introduction	4
Warning Information	5
Controls	6-7
Low Loss Operating Instructions	8
Liberator Operating Instructions	9-12
Additional Information	13

Important: Read this manual thoroughly before operating the Liberator/Low Loss.

Rx only.

Warning: This device is not intended for life sustaining use.

Caution: Use the Liberator/Low Loss only as directed by your doctor.

Warning: If you feel the equipment is not operating properly, call your health care provider. Do not attempt to repair or adjust the units yourself.

Liberator/Low Loss

Introduction

The liquid oxygen system includes the Liberator or Low Loss and a Portable unit, which provides you with supplementary oxygen as prescribed by your physician. This POI contains the instructions for using the Liberator and the Low Loss. Refer to the POI supplied with the Portable for its operation.

The Liberator is intended for stationary use. You may take oxygen directly from the Liberator.

The Low Loss has been designed to store liquid oxygen for purposes of filling a portable unit. The Low Loss is not designed to provide gaseous oxygen for breathing purposes.

The Liberator/Low Loss is offered as a top fill model or a dual top fill and side fill unit. They are filled by your health care provider.

The Portable provides an ambulatory source of oxygen for an extended period of time. It is filled from the Liberator/Low Loss.



Dual Fill Liberator shown

Also available in 10, 20, 37, 41, 45, and 60 liter models.

Liberator/Low Loss

Warning Information

Read this page carefully before using your unit.



- The unit contains liquid oxygen which is extremely cold; almost 300 degrees below zero Fahrenheit. Exposure to such a low temperature can cause severe frostbite.

- Liquid and gaseous oxygen, though nonflammable, cause other materials to burn faster than normal. This hazard, along with the low temperature of liquid oxygen, warrants certain safety precautions.



- Do not smoke while operating unit.
- Do not use or store your unit within five feet of electrical appliances, especially stoves, heaters, toasters, and hair dryers.



- Do not use or store your unit in an area where combustible materials such as oils, greases, aerosol sprays, lotions or solvents are present.



- Keep your unit in a well-ventilated area.
- In the event of an accidental tip-over, immediately but cautiously return unit into an upright position. **If any liquid oxygen is escaping, leave the area immediately and call your health care provider.**

 


- Do not touch the frosted parts of any unit.
- Do not store or operate the portable coupled to the Liberator/Low Loss.

Liberator/Low Loss

Controls

1. Liquid Level Gauge
- 2a. Gen 3 Meter Liquid Level Switch
- 2b. Gen 4 Meter Liquid Level Switch
3. Flow Control Knob
4. DISS Connection
5. Portable Release Button (Top Fill push-on style only)
6. Portable Fill Connections (see next page for QDV identification)
7. Pressure Gauge (Low Loss and 50 psi units only)
8. Vent Valve

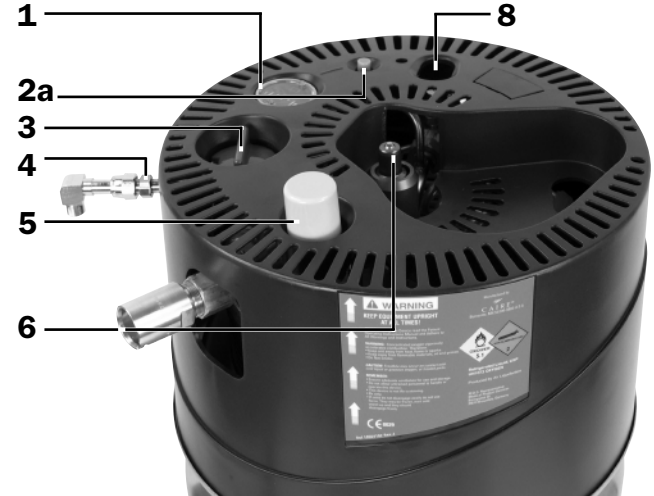



Liberator/Low Loss

Quick Disconnect Valve (QDV) Identification

Portable
Connector:



  Stationary
Connector:

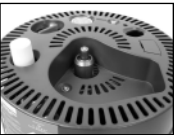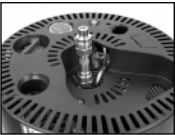

QDV Style:

CAIRE
Side Fill

LINCARE
(UC)

CRYO2

LIFE-OX

PENOX

TAEMA

PB

SF Locking

TF Locking

TF Push-on

Operating Instructions

1. To verify the level of liquid oxygen in the unit, see page 10.
2. Check the pressure gauge on the Low Loss to verify that the indicator displays in the normal range (pie shaped area).

Caution: *Do not attempt to fill the Portable if the pressure gauge indicates other than normal levels.*

3. Clean the fill connections on both the Low Low and Portable with a clean, dry, lint free cloth.

Warning: *These connection must be dry, because moisture can cause the equipment to freeze together and may cause leakage in the fill connectors.*

4. Turn the Portable flow control knob to the off (0) position.
5. Follow the filling instructions provided for the Portable.



Operating Instructions

1. Use the following chart as a guideline to determine the length of time the Liberator will operate:

FCV Setting																	
Model		Off	.25	.50	.75	1.0	1.5	2.0	2.5	3.0	4.0	5.0	6.0	8.0	10.0	12.0	15.0
L-20	Nominal	34-17	34-17	24-16	16-11	12-8	8-5	6-4	4-22	4-2	3-2	2-11	2-1	1-12	1-5	1-0	0-19
L-30	Nominal	50-2	50-2	35-15	23-18	17-19	11-21	8-21	7-3	5-22	4-10	3-13	2-23	2-5	1-18	1-11	1-4
L-37	Nominal	61-10	61-10	43-16	29-3	21-20	14-13	10-22	8-17	7-6	5-11	4-8	3-15	2-17	2-4	1-19	1-11
L-41	Nominal	68-14	68-14	47-22	32-7	24-3	15-15	12-2	9-4	8-1	6-1	4-19	4-6	2-22	2-8	1-23	1-13
L-45	Nominal	74-19	74-19	53-4	35-11	26-14	17-17	13-7	10-15	8-20	6-15	5-7	4-10	3-7	2-15	2-5	1-18
L-60	Nominal	90-2	90-2	68-8	45-13	34-4	22-18	17-1	13-16	11-9	8-12	6-19	5-16	4-6	3-10	2-20	2-6

Note: Times are in days and hours (format 00-00).

 
Note: The "Nominal" times are for ideal conditions, i.e. maximum fill, exact flow rates, good loss rate, Liberator not being moved, etc. These times are the maximum expected.

Note: Your individual results will vary.

Liberator/Low Loss



GEN 3 Gauge

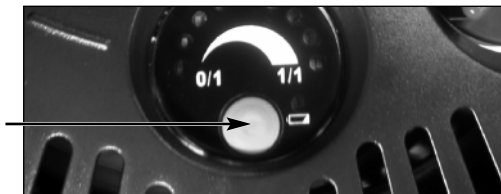

GEN 4 Gauge

2. To verify the level of liquid oxygen in the unit with the liquid level gauge:

- Depress the push button (liquid level switch) on top of the unit for two seconds minimum. Read the light bar to indicate contents level.

Caution: *The Liberator is empty if only the last segment of the light bar is lit.*

- If the Low Battery Indicator lights up when the button is depressed, inform your health care provider the next time your Liberator is filled.

Note: *The Liberator will continue to supply oxygen even if the Low Battery Indicator lights up, as long as there is liquid oxygen in the unit.*

Liberator

3. Attach a humidifier bottle to the DISS connection provided by health care provider:
 - Fill the humidifier bottle with distilled water to the proper level as indicated in the humidifier instructions.
 - Attach your breathing cannula to the oxygen tube connector on the humidifier.
4. Turn the flow control knob clockwise until the prescribed flow rate (numeral) is visible in the knob “window” and a positive detent is felt.

Caution: *The knob should not be set higher than the maximum prescribed flow rate. Out-of-specification oxygen flow will result if the flow control knob is set between flow rates. An indication of oxygen flow is the presence of bubbles in the humidifier bottle.*

Caution: *To ensure proper flowrate, verify fittings are tight and leak free.*



**Humidifier Bottle and Cannula
are not included*

5. Adjust your breathing cannula to the proper position to breathe comfortably.
6. You should be receiving oxygen now. Check to make sure that there are bubbles in the humidifier bottle.
7. Under certain environmental conditions and with continuous use, the Liberator may develop an excessive amount of ice on the warming and breathing coils within the shroud. You should defrost the unit between liquid oxygen fills to prevent this ice build-up.

Caution: Always turn the flow control knob to off (0 position) when not in use.



To defrost the unit:

- Fill a Portable so that you can continue to receive oxygen while the Liberator defrosts.
- Set the Liberator flow control knob to 0 and allow the unit to warm to room temperature, as indicated by the melting of all ice from the unit.
- Check the condensation collection bottle frequently during defrosting and empty as required.
- If the Portable runs low before the Liberator is fully defrosted, you may refill it as needed.

Liberator/Low Loss

Cleaning Standard

Warning: *Clean only after unit is empty and vented.*

- Clean by applying household glass cleaner to a lint-free cloth and wipe external surfaces – do not get glass cleaner on any internal components or valves.
- Allow unit to dry thoroughly before using.

Note: *Note to health care provider – for reprocessing procedures, see applicable service manual.*

WEEE and RoHS



This symbol is to remind the equipment owners to return it to a recycling facility at the end of its life, per Waste Electrical and Electronic Equipment (WEEE) Directive.

Our products will comply with the Restriction of Hazardous Substances (RoHS) directive. They will not contain more than trace amounts of lead or other hazardous material content.

Accessories

An optional roller base is available for all models. the five casters allow the unit to be easily moved while giving great stability.





Suite 316

1800 Sandy Plains Industrial Parkway
Marietta, GA 30066-6363

U.S.A.

www.cairemedical.com

M. D. D. Representative:

Medical Product Services

Borngasse 20

35619 Braunfels, Germany

Ref 13137946 Rev A 3/06

CE 0029